



**petite star**  
**HI LO HIGH CHAIR**



**Your child's safety is your responsibility**

If you have a problem with this product or require replacement parts please contact the Petite Star Nursery Customer Care line on 01923 663344.

Alternatively, write to:

**Petite Star Nursery Ltd**  
**Unit 3 Hill Farm Industrial Estate Leavesden Watford WD25 7SE**

**INSTRUCTIONS FOR USE**

**WARNING!**  
**IMPORTANT, KEEP FOR FUTURE REFERENCE**

COMPLIES TO BS EN 14988

## INTRODUCTION

 
1

This high chair is intended for use by children from birth to 3 years old, but not exceeding 18kg/ 40 lbs in weight.


## PARTS CHECK LIST

2


Foot Rest

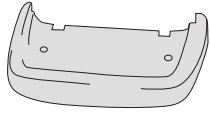


Seat unit

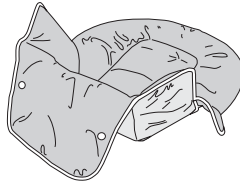


Main tray

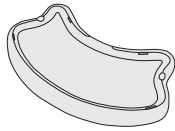


Feet

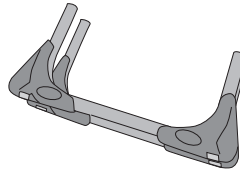

Food tray

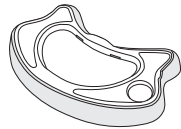

Seat supports and legs.

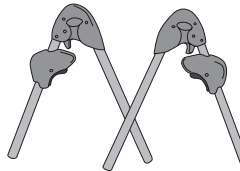


## PREPARATION FOR USE

3

### Assembling the high chair

- 1 To attach the foot rest, rest it on the bars on the base of the seat unit. The semicircular openings should sit directly on the seat bar closest to the front of the seat unit.

Pull the top of the foot rest forward so that it rotates around the seat bar and locks into place behind the front of the seat unit.

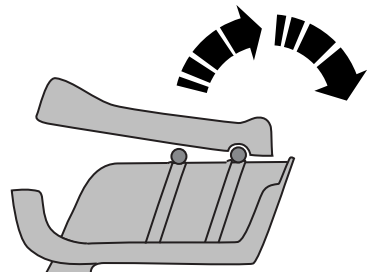


2

## PREPARATION FOR USE


3

### Assembling the high chair


- 2 Insert two screws one each side of the footrest, at positions shown by the arrows to secure it in place.

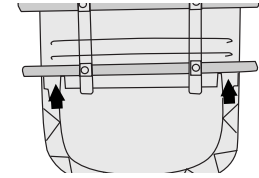

- 3 Slide the seat supports onto the seat bars. Insert four screws at the positions shown by the arrows and tighten.

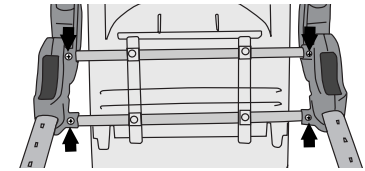


- 4 Insert both lower legs until the spring buttons come through the holes in the upper legs.

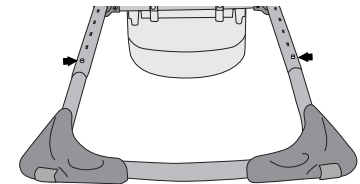


- 5 Fold down the front seat cover and secure to the footrest, using the press studs.

Note: Make sure the insert cushion is pushed right back into the main seat.

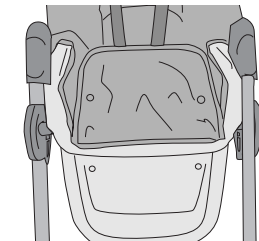

### Your assembled high chair



- 1 Stand the high chair upright. From behind, pull the rear legs away from the front legs until they click into position.

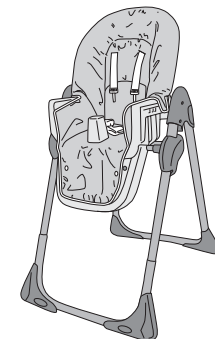

3

Adjusting the height of the high chair

- 1 The height of the high chair can be adjusted to five different positions. Stand in front of the high chair.
- 2 At each side of the highchair there is a button. Press these upwards to release the seat. Then move the high chair up or down to the desired position.

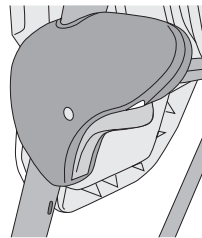
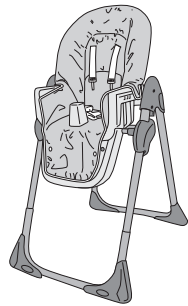


**WARNING!** Do not adjust the height while your child is in the high chair.

Note: When using the Highchair at a table ensure the child cannot push against a table or another surface as this could result in the chair tipping.



Attaching the main tray

- 1 Align the runners on the underside of the main tray with the arm rests on the high chair. Tray release handles are located on the underside of the main tray. Push these in, whilst pushing the main tray onto the high chair. When the tray is in position release the handles.
- 2 There are two positions for the tray. To move to the other position, first operate the tray release handles. When the tray has been moved to the desired position, release the handles. Ensure the tray is locked in place by pulling gently.

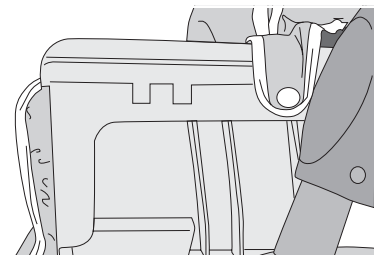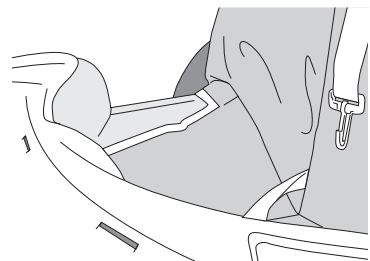

Adjusting the high chair

- 1 Stand on one side of the chair. Hold one of the chair arms, using your other hand lift up the lever on the back of the chair.
- 2 Adjust the chair to one of two positions. One sat upright or the other reclined.

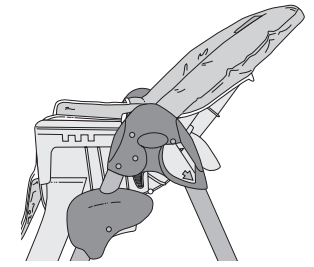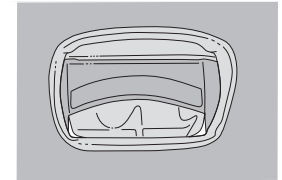



Securing your child

- 1 **WARNING!** Always use the harness. To secure your child in the high chair, place the crotch strap between your child's legs and insert the harness prongs into the side buckles, making sure your child's fingers are clear.

The harness should fit snugly around your child's waist. Adjust the harness adjusters (A) to get a snug fit around your child. 'D' rings are provided for fitting a separate harness complying with BS 6684.

Note: Ensure your child wears a correctly fitted and adjusted harness at all times. For extra safety, D-rings are provided for a separate harness approved to BS 6684 or BS EN 13210.

- 2 To release the harness press the fastener prongs and pull apart. Your child should always be harnessed in and should never be left unattended even for short periods.

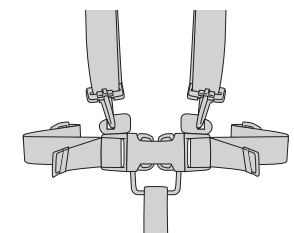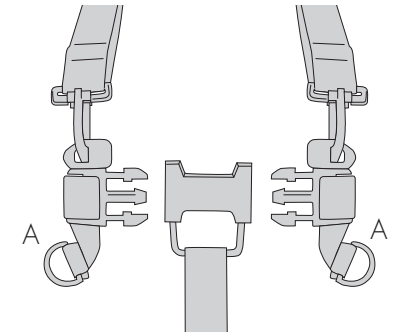


## AFTER USE

5


### Remove the main tray

- 1 To remove the main tray, press in the tray release handles and pull the tray away from the high chair. The tray should be cleaned in warm soapy water and should be dried thoroughly afterwards. The tray should not be immersed in water.

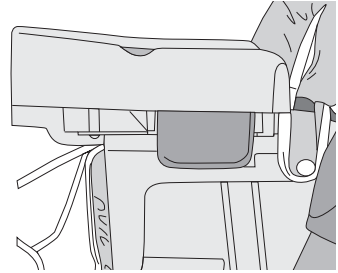

### Folding the high chair

- 1 To maximise the compact folding of the high chair, ensure that the high chair seat is in its lowest position. Remove the main tray. At the top of each leg is a small lever, standing in front of the chair, pull these towards you.
- 2 Tilt the chair forwards and the rear legs will then close against the front.

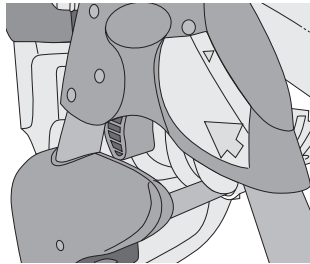

## CARE & MAINTENANCE

6

Sponge clean only, warm 40°C. Do not rub and do not spin dry. Dry flat.

The high chair must be dried thoroughly before using or storing.

Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

Apply a light lubricant such as WD40 sparingly to any of the moving parts of the high chair as required.

## SAFETY NOTES

7

As a parent or carer of children, we know that safety is of uppermost concern. Whilst this product has been developed to all of the relevant safety standards, we need your help to maintain that level of safety and minimise the risk that a baby using this product will be harmed. Your baby should never be left alone in the high chair and all tempting objects should be kept out of your child's reach.

### YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY

**WARNING** DO NOT LEAVE THE BABY UNATTENDED IN THE HIGH CHAIR. IT IS DANGEROUS TO PUT THIS HIGH CHAIR ON AN ELEVATED SURFACE.

- Ensure that the locks and catches on the product are not obstructed at any time during use.
- Ensure the safety harness is fastened and correctly adjusted at all times.
- Additional hazards such as electrical flex should be kept out of the reach of the child in the high chair.
- Stair hazard. Do not use near stairs or steps.
- Ensure the product is used on a stable level surface.
- Do not leave the baby unattended in the high chair.
- Do not use on any raised surface such as a table, work top or bed.
- Do not use near an open fire or any other kind of heater.
- Keep children away from the high chair during set-up and folding.
- Never use as a child restraint in any vehicle.
- The main tray is not designed to be used as a restraint.
- Never carry the high chair with your baby in it.
- Periodically check for loose or damaged parts and discontinue use should the high chair become damaged or broken.
- Only use replacement parts supplied by Petite Star. Others may render the high chair unsafe.
- When using the Highchair at a table ensure the child cannot push against a table or another surface as this could result in the chair tipping.
- Ensure your child wears a correctly fitted and adjusted harness at all times. For extra safety, D-rings are provided for a separate harness approved to BS 6684 or BS EN 13210.
- Do not adjust the baby in the highchair.
- It is recommended that the highchair is only used by children sitting upright without assistance.